



Kodak Easyshare Z981 Top Shutter Button Replacement

This guide will quickly and easily show how to replace the Shutter Button on the Kodak Easyshare Z981

Written By: Matthew Myers





TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)



PARTS:

- [Kodak Easyshare Z981 Replacement Shutter Button](#) (1)

Step 1 — Top Shutter Button



- Open the battery cover and remove the AA batteries from the camera if any are inserted.

Step 2




- Remove all screws on the outside of the camera with a [00 Phillips-Head](#) screwdriver
- Eight (8) **3mm** screws on the lower portion of the camera
 - Four (4) screws on the bottom of the camera
 - Four (4) screws inside the battery cover

Step 3



- Detach the bottom part of the camera by removing four (4) **3mm** screws
 - Two (2) screws are located in the left side of the device
 - Two (2) screws are located in the right side of the device

Step 4

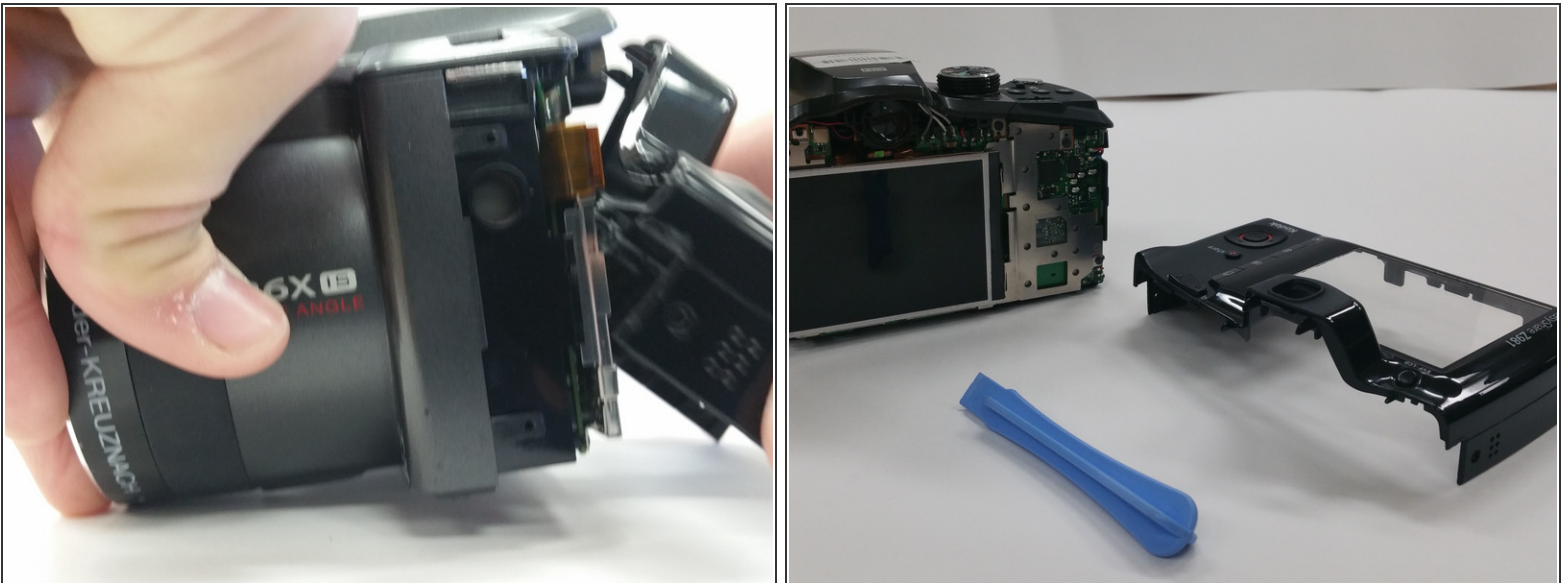

- Use the [Plastic Opening Tool](#) to put light pressure and remove the back cover of the camera

⚠ Be gentle when removing the back cover

Step 5




- Unscrew the four (4) **3mm** screws to remove the screen from the circuit board
- Use [Tweezers](#) to delicately detach the ribbon cable
- Carefully remove the screen brace from the circuit board

Step 6



- Remove the two (2) **3mm** screws from inside flash compartment
- Remove one (1) **3mm** screw from the circuit board

Step 7

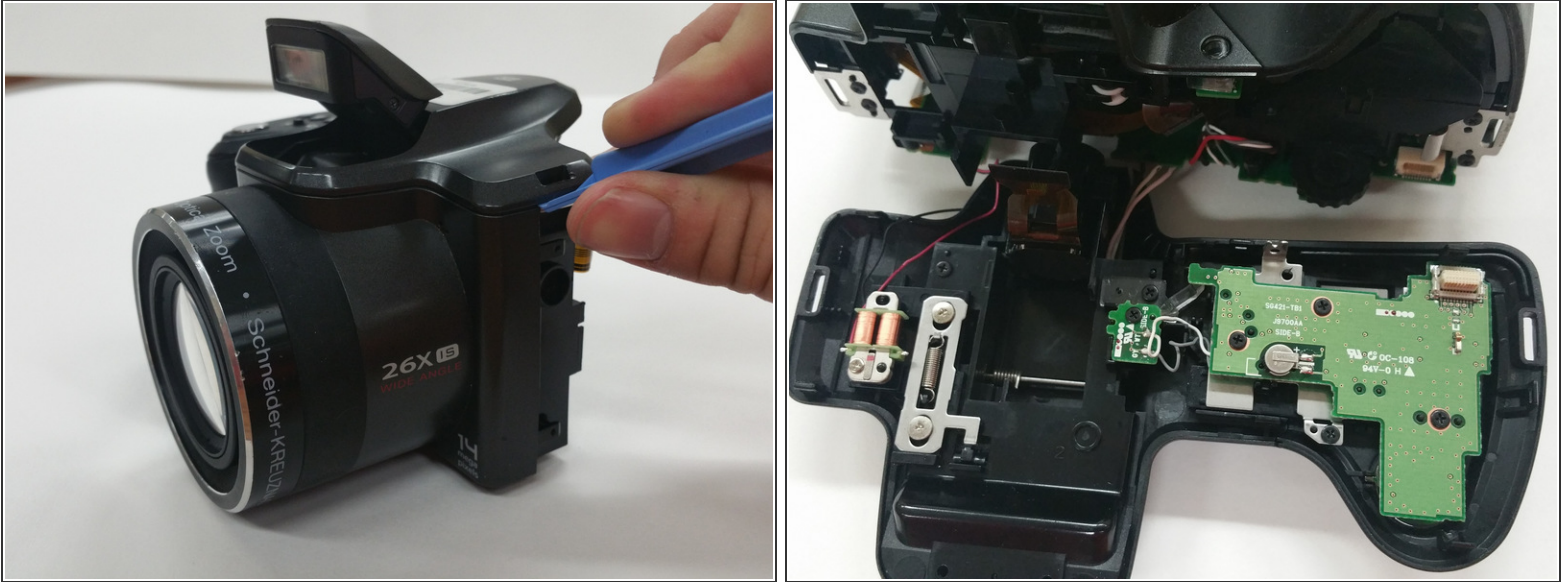

- Use the [Tweezers](#) to detach the ribbon cable connector from the circuit board
- Use the [Plastic Opening Tool](#) to gently apply pressure on the top of the camera and remove the upper portion


Step 8



- Remove the four (4) **3mm** screws from the circuit board directly underneath the shutter button and gently move the circuit board aside
- Lift up the metal clamp

 Use caution when removing the circuit board to avoid tearing the wires connected

Step 9

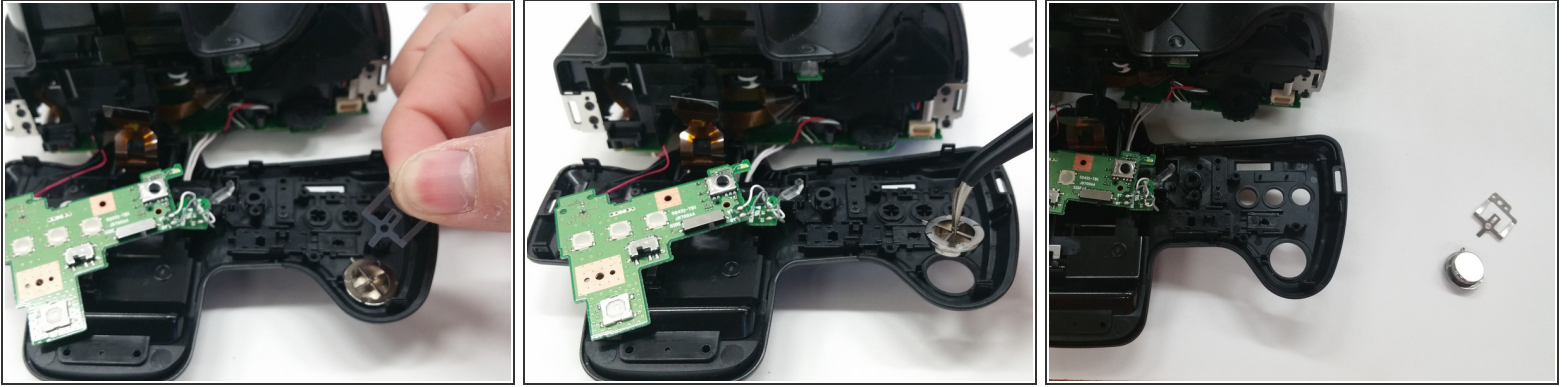

- Pull the small brace on top of the shutter button
- Using the [Tweezers](#), gently remove the shutter button

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 07:54:43 AM.